



**THANK YOU FOR BUYING A WHIRLPOOL PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.whirlpool.eu/register](http://www.whirlpool.eu/register)



 
**Before using the appliance carefully read the Safety Instruction.**

## FIRST TIME USE

After installation, wait at least two hours before connecting the appliance to the power supply. Once connected, it will start working automatically. The ideal temperature settings are preset from the factory.

After turning the appliance on, wait 4-6 hours for it to reach the correct food storage temperature.

## CONTROL PANEL

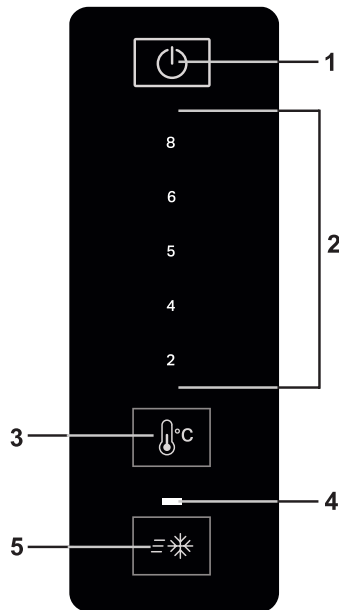

1. On/off
2. Fridge temperature indicator
3. Fridge temperature setting
4. Fast freeze indicator light
5. Fast freeze button (rapid freezing)

### ON/OFF

The whole product (both fridge and freezer compartments) can be turned on by pressing this button for 2 seconds. The last set value is indicated on the interface. Press this button to turn off the device.

### FRIDGE TEMPERATURE INDICATOR LIGHT

It shows the temperature of the fridge compartment.

### FRIDGE TEMPERATURE SETTING

It allows you to change the fridge temperature value, in a cyclical way; it also confirms the selected temperature on the interface. Recommended setting for the refrigerator compartment is +4°C.

### FAST FREEZE INDICATOR LIGHT

Illuminates when the Fast freeze button is pressed.

### FAST FREEZE FUNCTION

This function is recommended for freezing fresh food. Fresh food should be frozen as quickly as possible, for the best possible preservation and for keeping its nutritional value. Press the Fast freeze button when you need to freeze fresh food; the Fast freeze indicator will come on.

We recommend you press the Fast freeze button 24 hours before putting the food in, in order to prepare the freezer compartment for the best possible freezing conditions. We recommend you use the bottom drawer to maximize the freezing capacity. The Fast freeze function is automatically deactivated after 48 hours, or you can disable it manually by pressing the Fast freeze button.

### LED LIGHT

This product contains a light source of energy efficiency class F. If the LED light system does not work, please contact the Service to replace it.

**Important:** The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

 
### 6th SENSE

This function automatically works to ensure the optimal conditions to preserve the stored food. The "6th Sense" function is automatically activated when:

- a large amount of food is loaded into the refrigerator
- the refrigerator door is left open for a long time
- a prolonged power failure takes place, causing the internal temperature of the appliance to increase to values that cannot guarantee safe storage of food.

\* Available only on certain models

## HOW TO STORE FRESH FOOD AND BEVERAGES

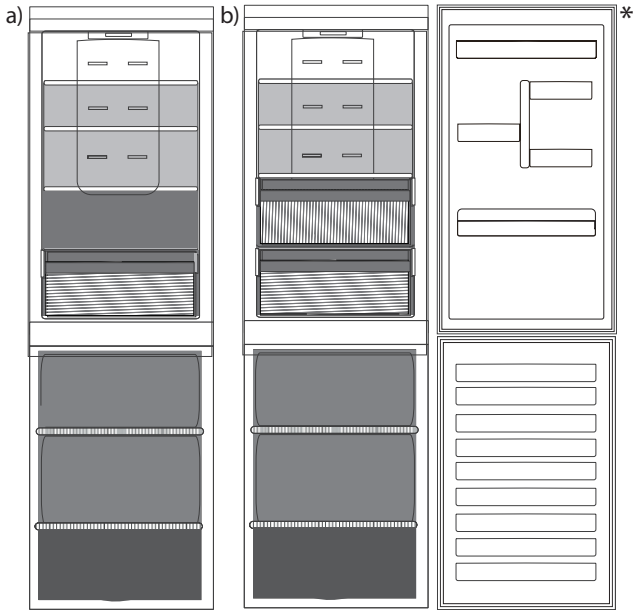

\* The number and type of door balconies depends on the model

### REFRIGERATION COMPARTMENT

 
Refrigerator compartment defrosting is completely automatic. Droplets of water on the rear wall inside the refrigerator compartment indicate that the automatic defrost phase is in progress. The defrost water is automatically run into a drain hole and collected in a container, where it evaporates.

### Fresh Box 0°C drawer \*

The Fresh Box 0°C it is a drawer (b) ideal to store meat and fish. By decreasing/increasing the fridge temperature, you impact the Fresh Box 0°C compartment temperature as well. Keep in mind that this compartment is a mechanical feature operating all the time and it cannot be switched off.

### Humidity Control\*

Turn on the humidity regulator (position B) if you want to store food in a less humid environment, like fruit, or turn it off (position A) if you want to store food in a more humid environment, like vegetables.

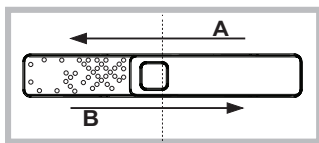

\* Available only on certain models

### Legend



#### TEMPERATE ZONE

Suggested for storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



 
#### COOL ZONE

Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt




#### COOLEST AREA

a) Suggested for storage of cold cuts, desserts, meat and fish



 b) Suggested for storage of meat and fish. The drawer available only on certain model



#### FRUIT & VEGETABLE DRAWER



#### FREEZER DRAWERS

(One drawer in models lower than 1,7m)



#### FREEZING ZONE DRAWER

(Max cool zone)

Suggested to freeze fresh / cooked food

### Foldable shelf\*

This shelf can be used in three different ways:

 
1. Full-depth, to use the entire surface.



2. Half-depth, to use the rear part and at the same time create space for taller items (like bottles and jugs) on the shelf below. To adjust the shelf to half-depth, slightly raise the front part then pull it in.



3. Flipped up if you need to make space for tall or bulky items on the shelf below. To flip the shelf up, first adjust it to the halfway position from half-depth. Flip the shelf down to go back to using it in half-depth and full-depth.

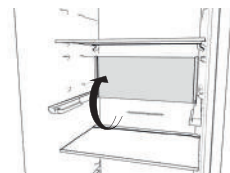

## FREEZER COMPARTMENT

Total No Frost freezers provide chilled air circulation around the storage areas, and prevent the formation of ice, thereby completely eliminating the need for defrosting. Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear. The freezer compartment allows for the storage of frozen food and the freezing of fresh food. The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate. Arrange the fresh food in the freezing area inside the freezer compartment, leaving enough space around it to allow air to circulate freely. Avoid allowing fresh food to come into direct contact with frozen food. Load limits are determined by baskets, flaps, drawers, shelves etc..

Make sure that these components can still close easily after loading. The freezing zone's drawer/compartments is shown in the picture above. To optimize freezing speed and get more storage space, the freezer compartment can be used without the freezer drawers and the food can be placed directly on the bottom of the compartment. To avoid food waste, please refer to the recommended setting and storage found in the online user manual.

### Ice cubes

 
Fill 2/3 of the ice tray with water and place it back in the freezer compartment. Do not use sharp or pointed objects to remove the ice.

## ACCESSORIES\*


### EGG TRAY




### ICE TRAY

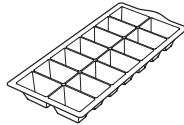

### BOTTLE RACK

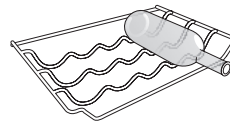 

### FOLDABLE SHELF

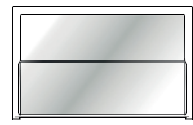 

## GENERAL INFORMATION

The drawers, baskets, and shelves should be kept in their current position unless otherwise specified in this quick guide. The light system inside the refrigerator compartment uses LED lights, which provide better lighting and use less energy than traditional bulbs.

Doors and lids of the refrigerator should be removed before disposal, to avoid children or animals getting trapped inside.

## TROUBLESHOOTING

| What to do if...   | Possible reasons  | Solutions   |
|--|---|---|
| The appliance is not working.  | There may be an appliance power supply problem.   | <ul style="list-style-type: none"> <li>Check if power cable plugged into a live socket with the proper voltage.</li> <li>Check if the protection devices and fuses of the electrical system in your home</li> </ul>   |
| There is water in the defrost pan.   | This is normal in hot, damp weather. The pan can even be half full.   | <ul style="list-style-type: none"> <li>Make sure the appliance is level so that the water does not overflow.</li> </ul>   |
| The edges of the appliance cabinet, which come in contact with the door seal, are warm to the touch. | This is not a defect. This is normal in hot weather and when the compressor is running.   |   |
| The light does not work.   | The light may need replacing. The appliance may be in On/ Stand-by model.   | <ul style="list-style-type: none"> <li>Make sure if the protection devices and fuses of the electrical system in your home work well.</li> <li>Check if the power cable is plugged into a live socket with the proper voltage</li> <li>In case the LEDs are broken the user must call the Service for exchange of the same type available only at our Aftersales Service Centers or authorized dealers.</li> </ul>  |
| The motor seems to run too much.   | Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls. | <ul style="list-style-type: none"> <li>Make sure that the appliance controls are correctly set.</li> <li>Check if there is not a large amount of food been added to the appliance.</li> <li>Check that the door is not opened too often.</li> <li>Check that the door close properly.</li> </ul>  |
| The appliance temperature is too high.   | There could be various causes (see "Solutions").  | <ul style="list-style-type: none"> <li>Make sure that the condenser (back the appliance) is free of dust and fluff.</li> <li>Make sure that the door properly closed.</li> <li>Make sure that the door seals properly fitted.</li> <li>On hot days or if the room is warm, the motor naturally runs longer.</li> <li>If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.</li> </ul> |
| The doors do not open and close properly.  | There could be various causes (see "Solutions").  | <ul style="list-style-type: none"> <li>Check that food packages are not blocking the door.</li> <li>Check that the internal parts or automatic ice maker are not out of position.</li> <li>Check that the door seals are not dirty or sticky.</li> <li>Ensure the appliance is level.</li> </ul>  |

## ALARM TABLE

| Alarm type       | Signal                             | Cause   | Cure                             |
|------------------|------------------------------------|---|----------------------------------|
| Door open alarm. | Refrigerator Light blinks.         | The door has remained open for more than 3 minutes. | Close the door.                  |
| Malfunction.     | Any temperature indicators blinks. | Product malfunction.                                | Contact the After-sales Service. |

\* Available only on certain models



**Policies, standard documentation, ordering of spare parts and additional product information can be found by:**

- Visiting our website [docs.whirlpool.eu](https://docs.whirlpool.eu) and [parts-selfservice.whirlpool.com](https://parts-selfservice.whirlpool.com)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



**Whirlpool**



400011574076